rivetdet

The Wall Mount for the Amazon Echo Dot and Google Home Mini

 
Contents Included

- A. Wall mount plate (x1)
- B. Cable management holder (x1)
- C. Magnetic quick release plate (x1)
- D. Mounting plate (x1)
- E. Screws (x7)
- i. 2 × 5.4*6mm to secure cable management holder to wall mounting plate
- ii.1 × 5.2*8mm to secure auick release plate to RivetDot holder
- iii.4 × 4.8*16mm to secure wall mount plate
- Wipe the bottom side of the Echo Dot / Home Mini to remove any dust or oil.










D


Peel off the clear film from the 3M adhesive + mounting plate (D) and place it accordingly onto the cleaned Echo Dot / Home Mini back.

 
Place wall mount plate (A) to the desired location and height where the Echo Dot or Home Mini will be mounted. Ensure the wall mount plate and two center screw holes are properly levelled.






Plug Echo Dot / Home

 

 

Fasten cable management holder (B) onto the wall mount plate (A) using screws (i).

> Fasten magnetic quick release plate (C) onto cable management holder using screws (ii).

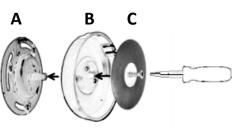


Mini USB charger to the wall outlet first and pull cable firmly and lock into the right opening slot of the cable management holder.

> Wind the cable firmly around the Wall Mount counter clockwise until there are 4-5 inches left of the cable.



Plug the micro USB into Echo Dot / Home Mini. Continue winding the cable and then lock the cable into the left opening slot.

 Bring excess cable across the right opening and lock in position. Tuck the remaining behind quick release plate (C).





For more info or sharing your RivetDot installation, please visit www.rivetdot.com or scan this QR code.



Disclaimer: This RivetDot wall mount is provided as is without any guarantees or warranty. The user is liable for usage of product.

